

Change Eurotherm controller from degree F to degree C

Referring to buttons as numbers 1, 2, 3, 4 starting from the left to right.

Hit and hold 1 for a while until it shows level 1

Then use 3 or 4 to choose level 2

It will ask for code – using 3 or 4 select “101” code. This gives you access to level 2

When you are in level 2 use button 2 as many times as you need to see UNITS menu

Change using 3 or 4 into C , hit 1 to exit menu

Then log off hitting 1 for a while until level 1 show.